



# Sony Cyber-shot DSC-TX7 Back Cover Replacement

Follow this guide to learn how to take off the back cover of the Sony Cyber-shot DSC-TX7.

Written By: Leslie Mundell



## INTRODUCTION

This guide will teach the user how to take off the back cover of the camera.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- The battery compartment is located on the bottom of camera.
- Move the slider from the 'lock' position to the 'open' position.

## Step 2



**i** Battery not shown.

- Pull battery from compartment.
- Insert newly charged battery into compartment, as shown in diagram (located in compartment).
- Shut compartment door.
- Move the slider back to the 'lock' position.

## Step 3 — Front Cover



- Use the Phillips #00 screwdriver to remove the 4mm length screws. There are 6 screws total.

## Step 4



- The 4 mm length screws are located on each side and on the bottom of the camera.
- 2 screws on each side (4 total).
- 2 screws on bottom.



## Step 5




- Gently pry around the front cover using the plastic opening tool.
- Carefully separate front cover from body of camera.

## Step 6




- The front cover is now removed from the camera and the internal hardware is now visible.
- ⚠ They front cover will still be connected by a ribbon. Be careful not to break the ribbon.

## Step 7 — Back Cover

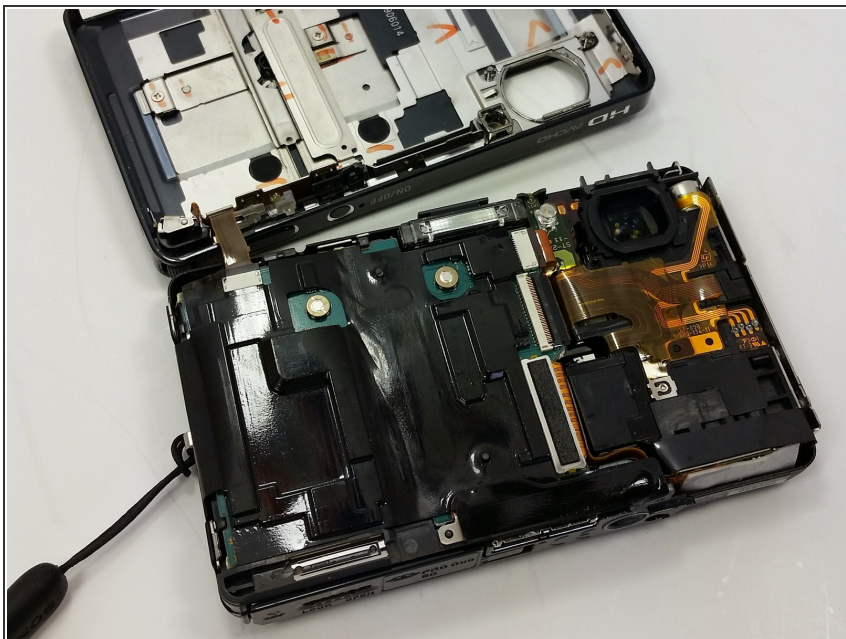

- This is the camera with the front cover unscrewed and partially removed.



## Step 8

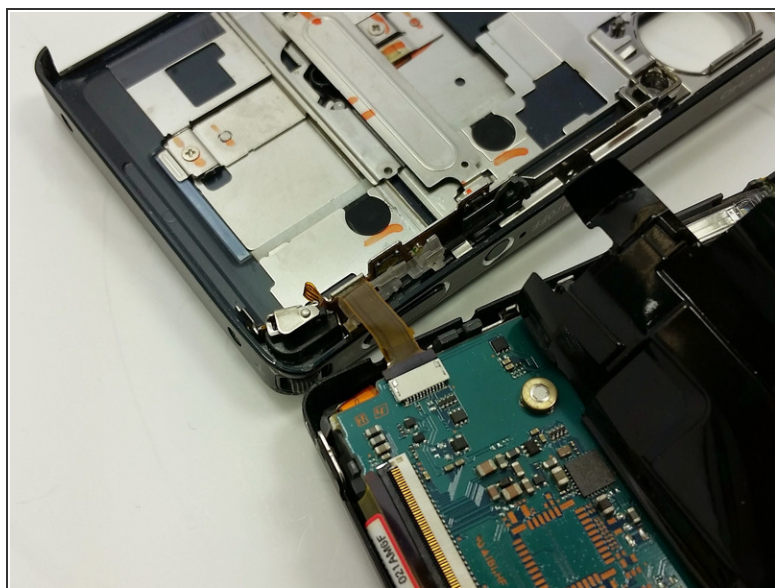

- Peel the black sticker from the motherboard.
- Locate the connection ribbon between the front cover and the body of the device.




## Step 9

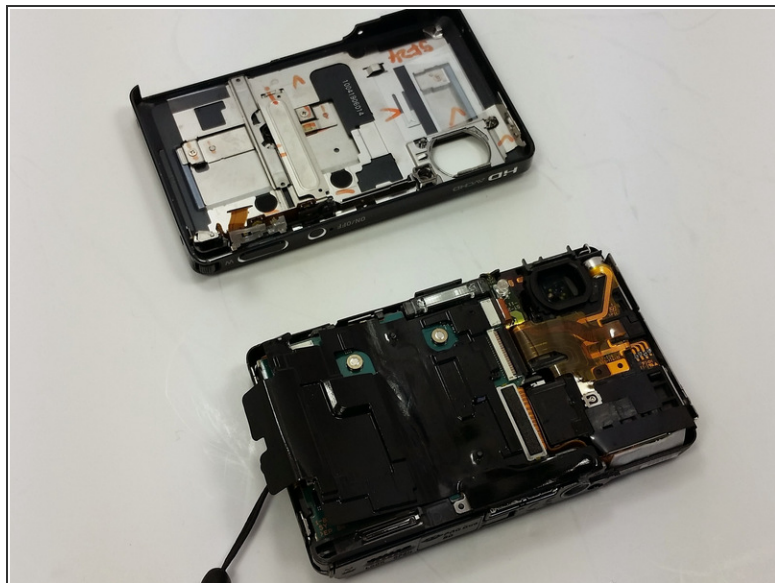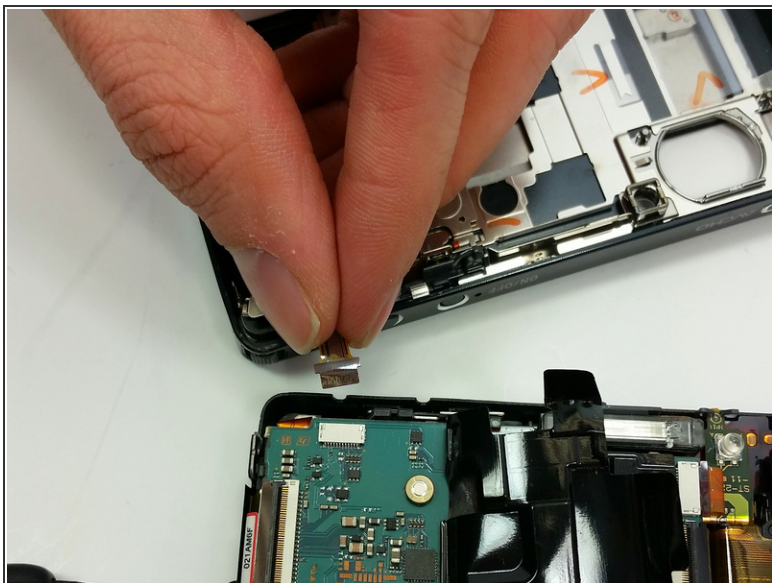

- Pull the ribbon out of the connection port so that they are completely disconnected.

## Step 10

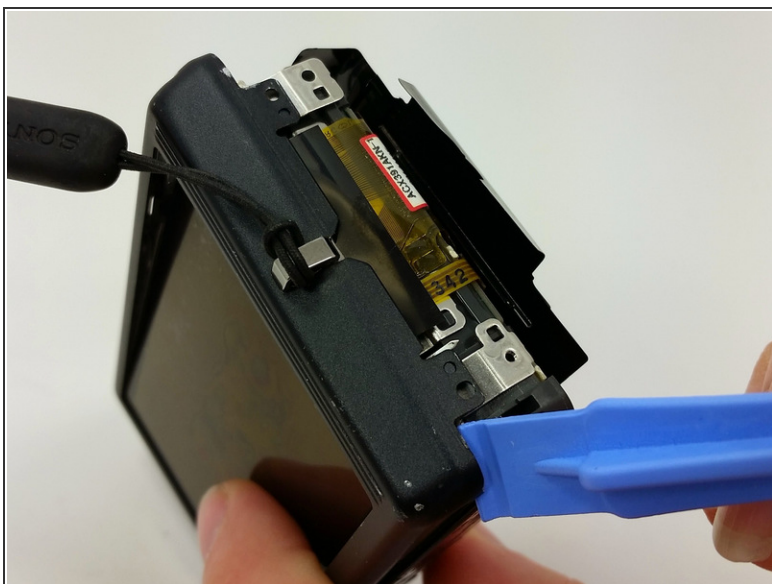

- Use the plastic opening tool to separate the back cover from the inner hardware.
- Continue until back cover can be pulled away from inner hardware.

## Step 11



- Remove the back cover so that the back cover is now completely separate from the body of the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-29 08:11:23 AM.